


We recommend that the installation is carried out by a qualified tradesman. The floor or plinth, which the bath sits on, must be as level as possible to avoid any movement.

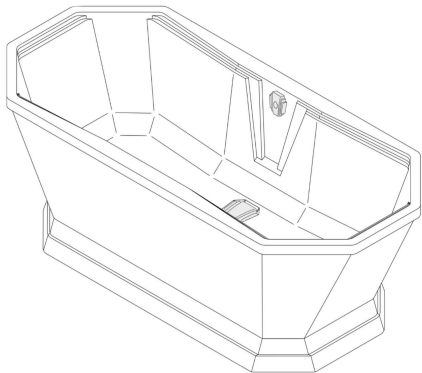

CONNECTING THE WASTE PIPE TO THE DRAIN PIPE



**Place bath in final position. Lift bath above floor and support.
Connect drain pipe to 1.5" BSP waste pipe supplied (See picture above)
Once connected check thoroughly for leaks.**

**To secure the bath in the final position, we recommend that silicon sealant is applied between the base of the bath and the floor.
(Leave for 24 hours before use)**



HIGHGATE