PANEL INSTALLATION *REFER TO HEIGHT **OF PANEL CHOSEN** ALLOW FOR AN UNEVEN FLOOR Panel Wall Batten Rawl Plug CLIPS Panel → . 19mm Clip Screw **≼** 35mm Bath _ Ledge WOODEN WOODEN WOODEN PANEL BLOCK **PANEL BLOCK** PANEL BLOCK (A)INSTALL PANEL CLIP AS ILLUSTRATED ABOVE. SUSPENDED PANEL 5-8mm GAP AT FLOOR LP-UK-0125B **ILLUSTRATION DRAWING - NOT TO SCALE**

PANEL INSTALLATION




- Offer up the small end of the panel to the bath. (See picture 1)



 Using the same method continue to the corner clips, pushing down simultaneously. (See picture 3 & 4)



 Continue down the full length of the bath using the same method until the panel is suspended by the clip system. (See picture 6)

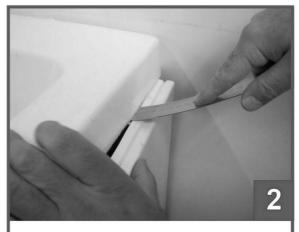

 Using a metal ruler or paint scraper push down on the clip while pushing the panel inwards. (See picture 2)





*REFER TO HEIGHT OF PANEL CHOSEN